

ET25KX

ELAAAC-00

INSTALLATION & OWNER'S MANUAL

TABLE OF CONTENTS ET25KX (ELAAAC-00)

SECTION 100	DESCRIPTION & SPECIFICATIONS
21891a	ET25KX SPECIFICATIONS & OPERATING FEATURES
21891b	ET25KX SPECIFICATIONS & OPERATING FEATURES
21892	INSTALLATION DIMENSIONS - ET25K(X)
21080	MOUNTING DIMENSIONS - BASE PLATE
21893	CAPACITY CHART - ET25KX 10-16-20 FT
SECTION 150	SAFETY
15394	VEHICLE & CRANE ELECTRICAL HAZARD INFORMATION
850711	SAFETY & HAZARDS - GENERAL
21894	DECAL PLACEMENT
21353	SAFETY DECALS (PAGE 1 OF 2)
21384	SAFETY DECALS (PAGE 2 OF 2)
21354	ET DECALS
21895	MODEL AND CAPACITY DECALS - ET25KX
SECTION 200	INSTALLATION
19959	CABLE & BATTERY REQUIREMENTS - ET AND HT CRANES
15660	BATTERY CABLE INSTALLATION DRAWING
19947	ELECTRICAL INSTALLATION
19961	INSTALLATION DRAWING - PENDANT CORD SUPPORT
22245	WIRE ROPE INSTALLATION DRAWING
SECTION 300	MAINTENANCE & SERVICE
21878	Lubrication & Maintenance Chart
19963	MINIMUM VOLTAGE TEST
SECTION 400	REPLACEMENT PARTS
21896	ET25KX REPLACEMENT PARTS DRAWING
21897	ET25KX REPLACEMENT PARTS LIST
21857	27198 BOOM REPLACEMENT PARTS DRAWING
21858	27198 BOOM REPLACEMENT PARTS LIST
▲ 21880	▲ ANTI-TWO BLOCK SYSTEM REPLACEMENT PARTS DRAWING
▲ 21881	▲ ANTI-TWO BLOCK SYSTEM REPLACEMENT PARTS LIST
21776	23154-2 ELECTRICAL COMPONENT DRAWING
21859	ET25KX WIRING DIAGRAM WITH ANTI-TWO-BLOCK
19368 20359	SWIVEL TERMINAL ASSEMBLY DRAWING & PARTS LIST
20359 22076	IN COMPARTMENT CONTROLS WIRING DIAGRAM
21758	22060 REPLACEMENT PARTS - 4 FUNCTION PENDANT CONTROL
20156	HYDRAULIC SYSTEM COMPONENTS REPLACEMENT PARTS DRAWING HYDRAULIC SYSTEM SCHEMATIC - ET25KX
21879	20061-1 EXTENSION CYLINDER SEAL KIT INFORMATION
21773	21752 ELEVATION CYLINDER SEAL KIT INFORMATION
21054	WINCH REPLACEMENT PARTS DRAWING & LIST
21886	21418 SLEWING RING REPLACEMENT PARTS
21899	21898 FIELD SERVICE LABEL KIT
	2 1000 I ILLD OLIVIOL LADLE IVI

MFG., INC.	TABLE OF CONTENTS	5-25-10A	SECTION
CINCINNATI, OHIO	ET25KX (ELAAAC-00)	3-24-10	21890

SECTION 100

DESCRIPTION

&

SPECIFICATIONS



SPECIFICATIONS AND OPERATING FEATURES

ET25KX-10/20

SPECIFICATIONS

12 VOLT BATTERY OPERATED

25,000 FT-LBS OVERTURNING MOMENT (Or as limited by truck stability)

MOMENT OVERLOAD SYSTEM

TELESCOPIC BOOM	10 / 20
BOOM HYD ELEVATION	-8° TO 75°
BOOMHYDEXT	10 - 16 FT
BOOMMANUALEXT	4 FT
CAPACITY	1250 LBS @ 20 FT REACH
CAPACITY	5000 LBS @ 3 TO 5 FT REACH
WIRE ROPE	5/16" DIA x 80 FT
PENDANTCORDLENGTH	25 FT

WINCH - 2500 LBS SINGLE LINE CAPACITY

With Automatic Load Brake

ELECTRIC HYDRAULIC BOOM ELEVATION

ELECTRIC HYDRAULIC BOOM EXTENSION & RETRACTION-6FT STROKE

360° CONTINUOUS

REMOTE CONTROL PENDANT

25 ft Straight Cord with Four Environmentally Sealed Toggle Switches Protected by a Guard

MASTER DISCONNECT SWITCH

OUTRIGGERS AVAILABLE

Side Bracket Type Outriggers

Fold Away Type Outriggers

Pullout Type Outrigger System

	MFG., INC. CINCINNATI, OHIO
--	--------------------------------

INSTALLATION DWG	10-9-09	C120
ET25KX-10/20	SUPERCEDES	21891a

OVERLOAD SENSING SYSTEM

This crane is equipped with an Overload Sensing System. If the capacity of the crane is exceeded, the "Winch Up", "Boom Down", and "Boom Out" functions will be shut down. The "Winch Down", "Boom Up", and "Boom In" functions will continue to operate and can be used to relieve the overload condition. The "Rotation" function also will continue to operate.

CONTROL PRIORITY SYSTEM

The design intent of the electrcal and hydraulic system is such that some functions can be operated simultaneously, while others are meant to be operated individually. To summarize the control system see the explanations below.

- Winch up takes priority over all functions.
- Winch Down can be operated with any other single function.
- Hydraulic functions (Rotation Right, Rotation Left, Boom Up, Boom Down, Boom Out and Boom In) are designed to function one at a time.

CABLE DRUM AND SHEAVE DIAMETERS


The drum on the ET25KX is 5-5/16" in diameter which provides the first layer wire rope pitch diameter 18 times the rope diameter as required by ANSI B30.5 Cranes Standards. The cable sheaves are either 16 (snatch block) or 18 (boom) times the cable diameter which likewise conforms.

MISCELLANEOUS


- A. CAPACITY INDICATOR
 - Select boom reach and angle allowable for load by using capacity indicator arrow and chart on either side of boom.
- B. BATTERY HOOKUP
 - A parallel auxiliary battery should be installed near the crane as shown on Dwg. 19947 under "RECOMMENDED INSTALLATION". The parallel auxiliary battery minimum rating should be 450 Cold Cranking Amps (at 0° F) and 100 reserve capacity, or 78 plates and 70 amp hours.



INSTALLATION DWG	10-9-09	C120
ET25KX-10/20	SUPERCEDES	21891b

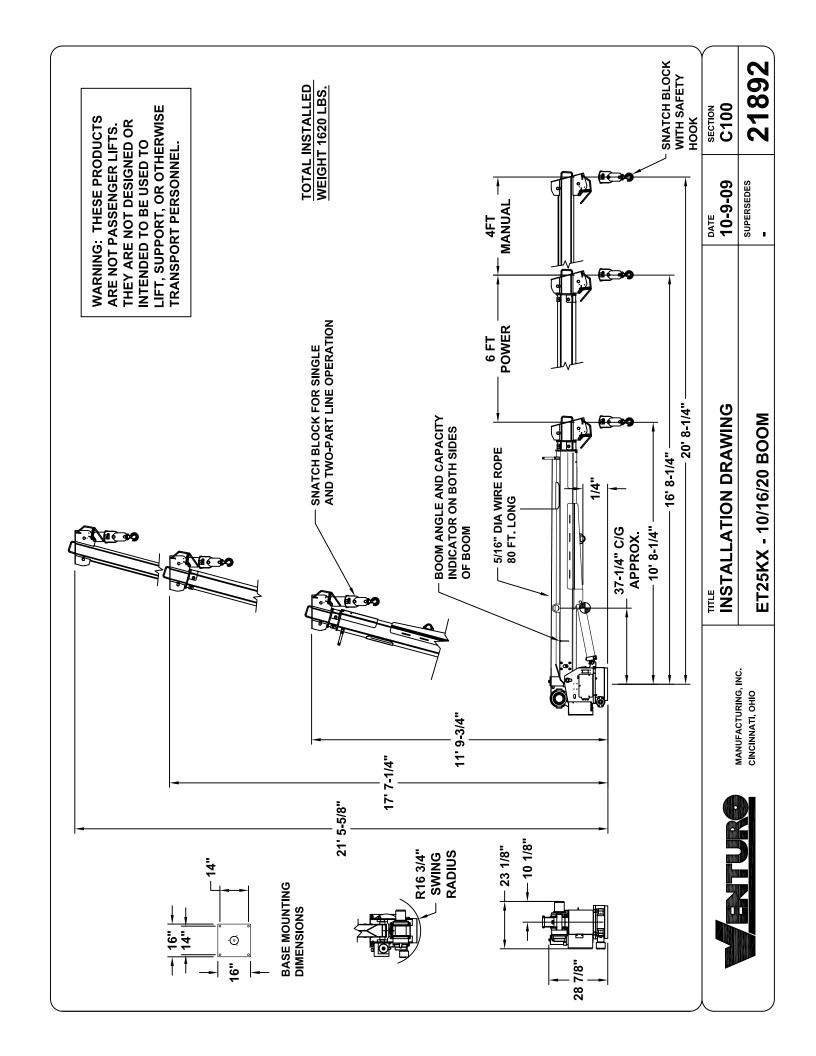

ET/HT25/30/36KX(X) BASE MOUNTING DIMENSIONS

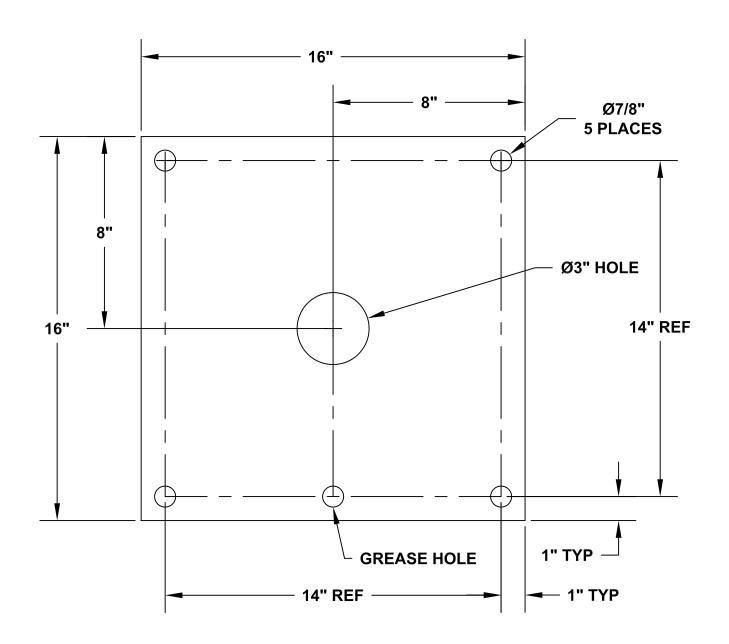

FRONT OF CRANE -----


THE FIFTH GREASE HOLE IS FOR A SINGLE BASE PLATE ONLY



MFG., INC. CINCINNATI, OHIO

TITLE	DATE	SECTION
BASE MOUNTING DIM	8-10-09B	C100
ET/HT25/30/36	supersedes 1-16-09A	21080

ET/HT25KX - 10-16-20 BOOM MAXIMUM CAPACITY CHART

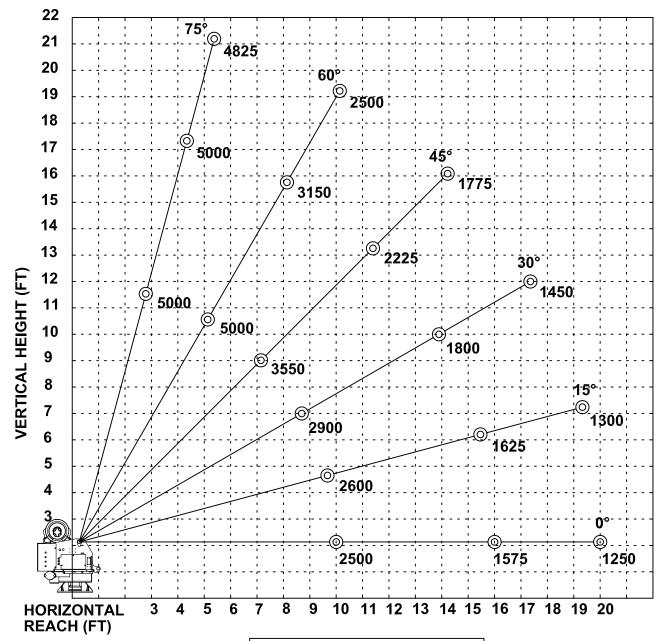

MUST USE SNATCH BLOCK FOR LOADS OF 2500 LBS. AND GREATER



CAPACITY CHART	7-1-10A	SECTION C100
ET/HT25KX - 10-16-20	supersedes 10-9-09	21893

SECTION 150

SAFETY



VEHICLE & CRANE MOUNTED ELECTRICAL HAZARD SIGN APPLICATION & INFORMATION

ET & HT CRANE SERIES



SIGN NO. 15393A DISPLAYS THE INTERNATIONAL SYMBOL FOR ELECTRICITY AND WARNS OF DANGER FROM AN ELECTRICALLY CHARGED VEHICLE, CRANE, OR LOAD. FOUR ARE RECOMMENDED (ONE FOR EACH SIDE AND ONE FOR EACH END OF VEHICLE) TO BE APPLIED IN LOCATIONS WHICH ARE READILY VISIBLE TO GROUND PERSONNEL.



SIGN NO. 15401 PROVIDES ADDITIONAL WARNING OF LEGAL REQUIREMENTS WHEN OPERATING NEAR HIGH VOLTAGE LINES. THIS SIGN IS PLACED ON THE CONTROL PENDANT SIDE OF BOOM.

REQUIRED MINIMUM CLEARANCES REFERRED TO ON SIGN NO. 15401

REQUIRED CLEARANCES FROM OVERHEAD HIGH-VOLTAGE LINES

	AL VOLTAGE (kV) TO PHASE)	MINIMUM REQUIRED CLEARANCE (FEET) *
over over over over over	0 - 50 50 - 200 200 - 350 350 - 500 500 - 750 750 - 1000	10 15 20 25 35 45

REQUIRED CLEARANCES FROM ENERGIZED HIGH-VOLTAGE CONDUCTORS (WHILE IN TRANSIT)

NOMINAL VOLTAGE (kV)	MINIMUM REQUIRED
(PHASE TO PHASE)	CLEARANCE (FEET) *
0 - 0.75	4
over 0.75 - 50	6
over 50 - 345	10
over 345 - 750	16
over 750 - 1000	20

^{*} NOTE: ENVIRONMENTAL CONDITIONS SUCH AS FOG, SMOKE, OR PRECIPITATION MAY REQUIRE INCREASED CLEARANCES

ENTURO MFG., INC. CINCINNATI, OHIO	MEC INC	INSTALLATION DWG	5-15-02H	C150	
	ET & HT CRANE SERIES	SUPERCEDES 5-13-97G	15394	\int	

CRANE SAFETY AND HAZARDS

ETCRANES ▲

CAUTIONS

- 1. INSPECT VEHICLE AND CRANE, INCLUDING OPERATION, PRIOR TO USE DAILY.
- 2. DO NOT USE THIS EQUIPMENT EXCEPT ON SOLID, LEVEL SURFACE WITH CRANE MOUNTED ON FACTORY-RECOMMENDED TRUCK.
- 3. BEFORE OPERATING THE CRANE, REFER TO MAXIMUM LOAD (CAPACITY) CHART ON CRANE FOR OPERATING (LOAD) LIMITATIONS.
- 4. DO NOT OPERATE, WALK, OR STAND BENEATH BOOM OR A SUSPENDED LOAD.
- 5. ATTACH PENDANT CORD SUPPORT SNAP TO ATTACHMENT POINT BEFORE PLUGGING IN PENDANT, IF SO EQUIPPED.
- 6. UNPLUG PENDANT AND SHUT OFF MASTER DISCONNECT SWITCH WHEN CRANE NOT IN USE.
- 7. FOR TRAVEL, BOOM MUST BE IN STOWED POSITION.

DANGER

- THIS CRANE IS NOT A PASSENGER LIFT
- IT IS NOT DESIGNED OR INTENDED TO BE USED TO LIFT, SUPPORT, OR OTHERWISE TRANSPORT PERSONNEL.


YOU MUST NOT OPERATE THIS CRANE UNLESS

- YOU HAVE BEEN TRAINED IN THE SAFE OPERATION OF THIS CRANE AND
- 2. YOU KNOW AND FOLLOW THE SAFETY AND OPERATING RECOMMENDATIONS CONTAINED IN THE MANUFACTURER'S MANUALS, YOUR EMPLOYER'S WORK RULES, AND APPLICABLE GOVERNMENT REGULATIONS. AN UNTRAINED OPERATOR SUBJECTS HIMSELF AND OTHERS TO DEATH OR SERIOUS INJURY.

ELECTROCUTION HAZARD

- THIS MACHINE IS NOT INSULATED.
- MAINTAIN SAFE CLEARANCES FROM ELECTRICAL LINES AND APPARATUS.
- YOU MUST ALLOW FOR BOOM SWAY, ROCK OR SAG, AND ELECTRICAL LINE AND LOADLINE SWAYING.
- THIS LIFTING DEVICE DOES NOT PROVIDE PROTECTION FROM CONTACT WITH OR PROXIMITY TO AN ELECTRICALLY CHARGED CONDUCTOR.
- YOU MUST MAINTAIN A CLEARANCE OF AT LEAST 10 FEET BETWEEN ANY PART OF THE CRANE, LOADLINE, OR LOAD, AND ANY ELECTRICAL LINE OR APPARATUS CARRYING UP TO 50,000 VOLTS. ADDITIONAL CLEARANCE IS REQUIRED FOR VOLTAGES IN EXCESS OF 50,000 VOLTS. REFER TO DRAWING 15394 FOR ADDITIONAL INFORMATION.
- DEATH OR SERIOUS INJURY WILL RESULT FROM CONTACT OR INADEQUATE CLEARANCE.

	MFG INC.	INSTALLATION DWG	4-18-08H	C150
	CINCINNATI, OHIO	▲ELECTRIC CRANES	7-29-03G	850711

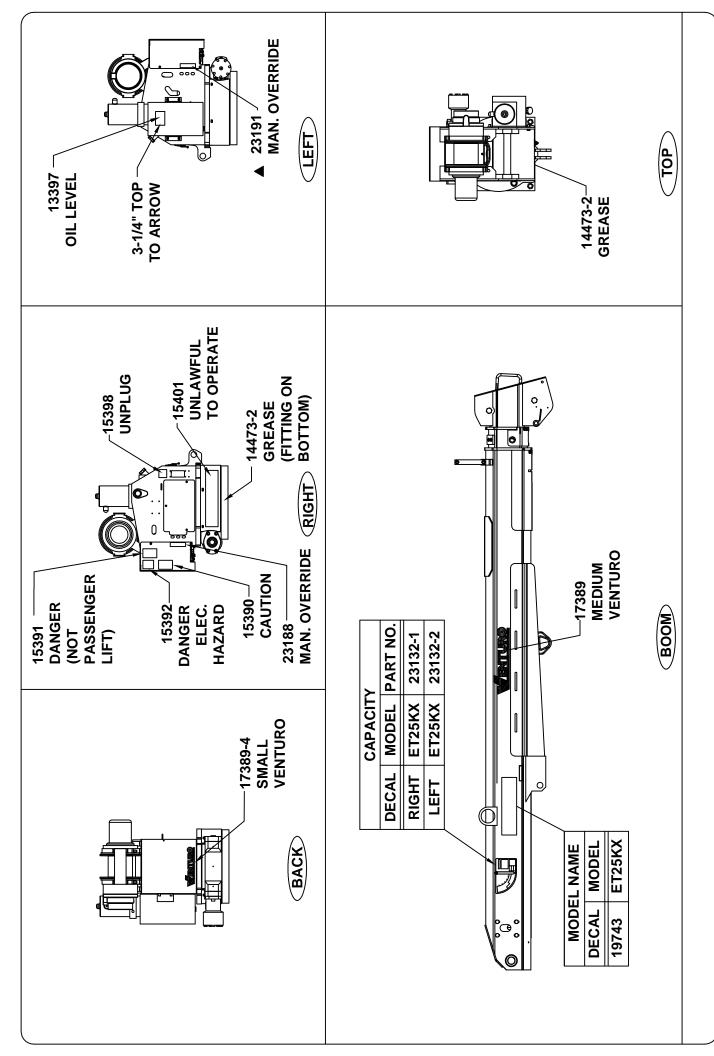

21894

SUPERSEDES 3-23-12A

SECTION C150

07-03-12B

DECAL PLACEMENT

MANUFACTURING, INC.

CINCINNATI, OHIO

TILE

ET25KX

DATE

PART NO.: 15390

DECAL: **CAUTION - INSPECT VEHICLE & CRANE**

FUNCTION: To inform the operator of key operating

requirements.

QUANTITY: 1

PLACEMENT: Rear cover.

PART NO.: 15391

DANGER - NOT PASSENGER LIFT DECAL:

FUNCTION: To inform the operator not to lift, support or

transport personnel, and to ensure that crane

operator is adequately trained.

QUANTITY: 1

PLACEMENT: Rear cover.

PART NO.: 15392

DANGER - ELECTROCUTION HAZARD DECAL:

FUNCTION: To inform the operator that the machine

(crane) represents an electrocution hazard should it come close to or in contact with

electrical voltage source.

QUANTITY: 1

PLACEMENT: Rear cover.

PART NO.: 15401

DECAL: **UNLAWFUL TO OPERATE**

FUNCTION: To inform the operator of proper operation in

vicinity of power lines.

QUANTITY: 1

PLACEMENT: Right side of housing.

PART NO: 15393A

DANGER - ELECTROCUTION HAZARD DECAL:

FUNCTION: Warns of danger from electrically charged

vehicle, crane or lead.

QUANTITY: 4

PLACEMENT: One on each side and each end of vehicle.



BEFORE OPERATING THE CRANE, REFER TO MAXIMUM LOAD (CAPACITY) CHART ON CRANE FOR OPERATING (LOAD) LIMITATIONS.

4. DO NOT OPERATE, WALK OR STAND BENEATH BOOM OR A SUSPENDED LOAD 5. UNPLUG PENDANT AND SHUT OFF MASTER DISCONNECT SWITCH WHEN CRANE NOT

6. FOR TRAVEL, BOOM MUST BE IN STOWED POSITION.



THIS CRANE IS NOT A PASSENGER LIFT IT IS NOT DESIGNED OR INTENDED TO BE USED TO LIFT. SUPPORT OR OTHERWISE TRANSPORT PERSONNEL.

YOU MUST NOT OPERATE THIS CRANE UNLESS:

YOU HAVE BEEN TRAINED IN THE SAFE OPERATION OF THIS CRANE; AND OF THIS CRANE; AND OF THE SAFETY AND OPERATING RECOMMENDATIONS CONTAINED IN THE MANUFACTURET'S MANUFACTURET'

AN UNTRAINED OPERATOR SUBJECTS HIMSELF AND OTHERS TO DEATH OR SERIOUS INJURY.




ELECTROCUTION HAZARD

MAINTAIN SAFE CLEARANCES FROM ELECTRICA LINES AND APPARATUS. YOU MUST ALLOW FOI BOOM SWAY, ROCK OR SAG AND ELECTRICAL LIN AND LOADLINE SWAYING.

DEATH OR SERIOUS INJURY WILL RESULT FROM CONTACT OR INADEQUATE CLEARANCE.

UNLAWFUL TO OPERATE THIS EQUIPMENT

WITHIN 10 FEET OF HIGH - VOLTAGE LINES OF 50,000 VOLTS OR LESS.

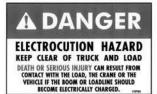



CRANES

SAFETY DECALS

DATE

SECTION

8-10-09B C150 SUPERSEDES

5-6-08A



MFG., INC. **CINCINNATI, OHIO** **PART NO.: 15393A**

DECAL: DANGER - ELECTROCUTION HAZARD

FUNCTION: Warns of danger from electrically

charged vehicle, crane or lead.

QUANTITY: 4

PLACEMENT: One on each side and each end of

vehicle.

ELECTROCUTION HAZARD
KEEP CLEAR OF TRUCK AND LOAD
DEATH OR SERIOUS INJURY CAN RESULT FROM
CONTACT WITH THE LOAD, THE CRANE OR THE
YERICLE IT THE BOOM OR LOAD LINE SHOULD
BECOME RECTRICALLY CHARGED.



PART NO.: 15513

DECAL: MASTER DISCONNECT SWITCH

FUNCTION: To inform the operator of location

and operation of master disconnect

switch.

QUANTITY: 1

PLACEMENT: On master disconnect switch bracket.







| 5

SAFETY DECALS

8-10-09A

c150

CRANES

4-26-06

SUPERSEDES

21384

MFG., INC. CINCINNATI, OHIO PART NO.: 14473-2

DECAL: GREASE

FUNCTION: To show the operator where to apply grease.

GREASE

QUANTITY: Varies

PLACEMENT: Near grease fittings.

PART NO.: 13397

DECAL: OIL LEVEL

FUNCTION: To inform the operator of proper oil level to

maintain.

QUANTITY: 1

PLACEMENT: Side of hydraulic power unit.

OIL LEVEL

USE AUTOMATIC TRANSMISSION FLUID

ATF - DEXRON

PART NO.: 15398

DECAL: UNPLUG REMOTE CONTROL

FUNCTION: To inform the operator to unplug remote

control when not in use.

QUANTITY: 1

PLACEMENT: Near pendant socket.





ET DECALS	

ET CRANES

8-10-09B C150 SUPERSEDES 5-6-08A 21354

SECTION

PART NO.: 23132-1 & 23132-2 (OPPOSITE)


DECAL: CRANE CAPACITY

FUNCTION: To show the operator the operating

capacities of crane.

QUANTITY: 1 each

PLACEMENT: One on each side of boom.

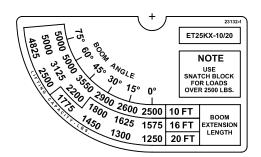

PART NO.: 19743

DECAL: MODEL NUMBER (ET25KX)

FUNCTION: To show the model of the crane.

QUANTITY: 2

PLACEMENT: One on each side of boom.



	NUFACTURING INC.
--	------------------

ET25KX	SUPERSEDES	21895
MODEL & CAPACITY DECALS	10-9-09	C150
TITLE	DATE	SECTION

SECTION 200

INSTALLATION



IMPORTANT


ADEQUATE WIRING IMPERATIVE FOR PROPER OPERATION


- 1. PROPER GROUND PATH SEE DWG 15660
- 2. CURRENT DRAW IS SEVERAL HUNDRED AMPERES ADEQUATE WIRE SIZE AND BATTERY CAPACITY IS ABSOLUTELY ESSENTIAL (SEE CHART BELOW.)

MINIMUM WIRE GAUGE AND BATTERY SIZE										
MODEL	TOTAL LENGTH OF CABLE (FT)* 12 VOLT BATTE					RYREQUIREMENTS				
	0-20	21-25	26-30	31-40	41-50	51-60	61-70	71-80	CCA (A)**	RC (MIN)***
CE6K CT2000 CT2003/4/5 DT7K	#4	#4	#2	#2	#1	#0	#0	#00	350	100
ET8K ET8KX ET12K ET12KX	#2	#2	#1	#0	#00	NOTRE	COMMEND	DED	450	100
ET18K SEE DRAWING 19947 FOR CABLE AND BATTERY REQUIREMENTS ET25K ET25K ET25KX ET30KX ET36KX										


- * INCLUDES GROUND CABLE
- ** CCA=COLD CRANKING AMPS AT 0' F.
 THE CCA RATING IS A MEASURE OF THE ABILITY OF THE BATTERY TO DELIVER A <u>HIGH CURRENT</u> FOR A SHORT PERIOD OF TIME.
- *** RC=RESERVE CAPACITY IN MINUTES AT 25 AMPS AND 80' F.
 THE RC RATING IS A MEASURE OF THE <u>PERIOD OF TIME</u> THE BATTERY CAN SUPPLY A GIVEN CURRENT WITHOUT RECHARGING.

ENTURO	MFG., INC.	CABLE & BATTERY	2-9-09D	C200
	CINCINNATI, OHIO	ELECTRIC CRANES	11-24-08C	19959

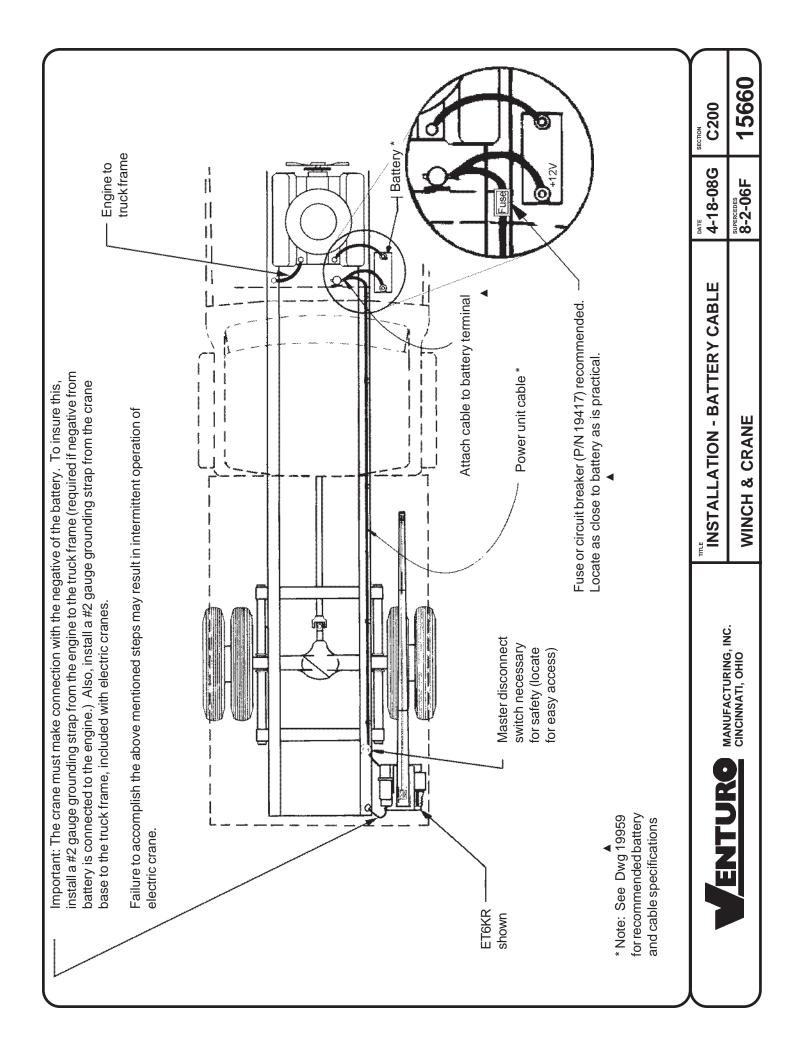

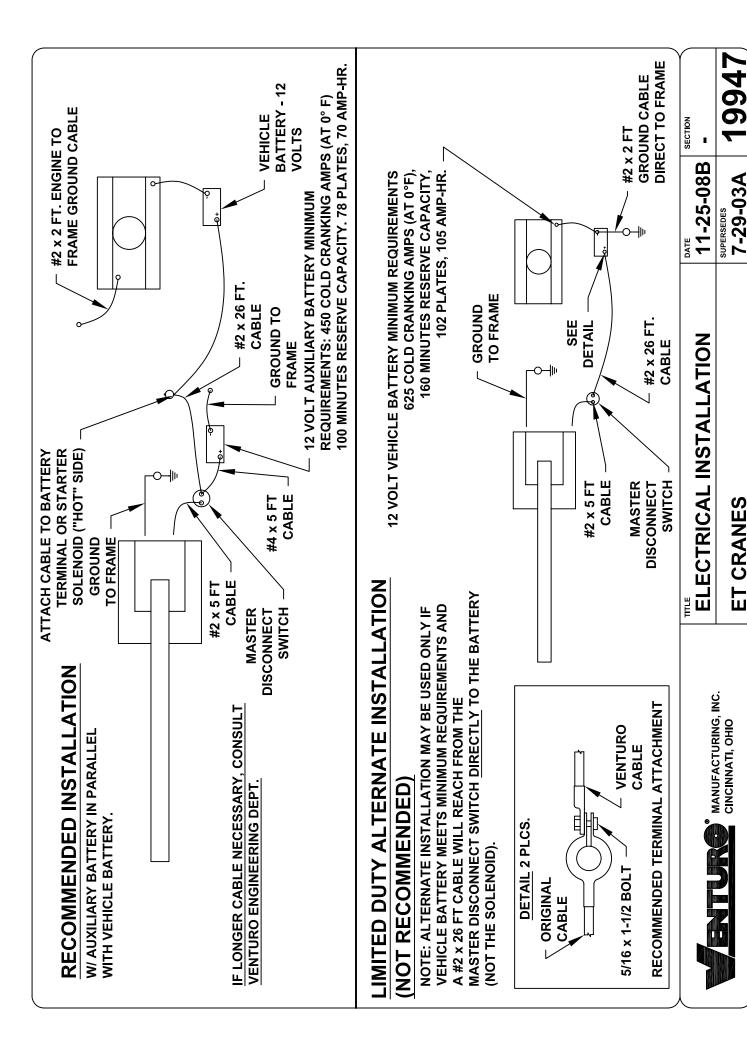

IN-COMPARTMENT CONTROLS INSTALLATION ET25/30/36KX(X)

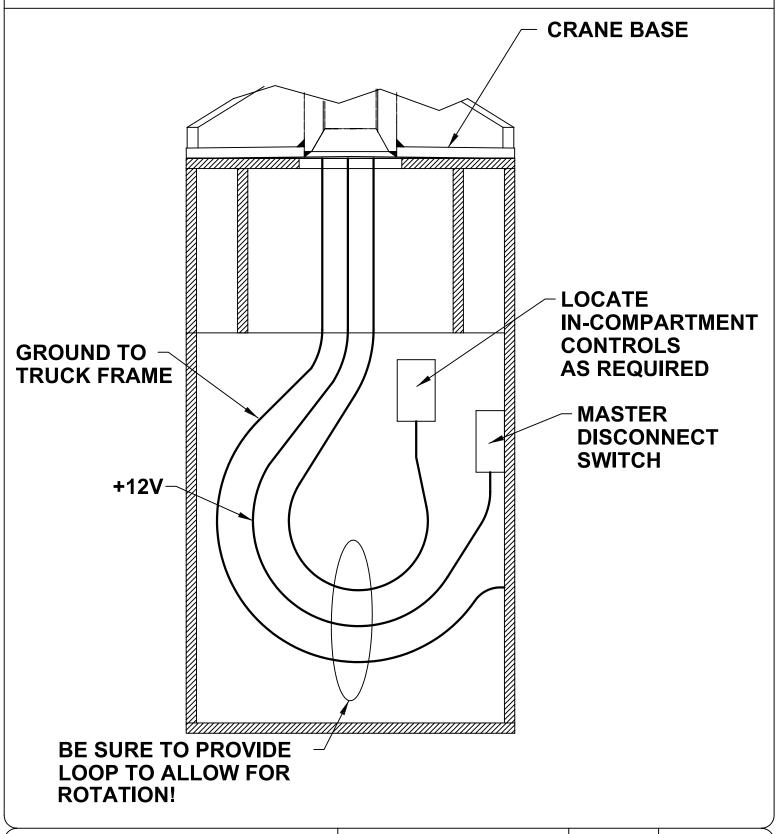



ET25/30/36KX(X)	SUPERSEDES	19961
INSTALLATION DWG	9-13-01	-
TITLE	DATE	SECTION

WIRE ROPE INSTALLATION

STEP 1: UNWIND COIL OF WIRE ROPE BY 'ROLLING' ALONG THE FLOOR. THIS WILL PREVENT'KINKING'.

STEP 2: INSERTWIRE ROPE END THROUGH ANTI-TWO-BLOCK WEIGHT.

STEP 3: INSERT WIRE ROPE END INTO POCKET OPENING ON WINCH AND THROUGH WEDGE POCKET AS SHOWN IN (FIG 1).

CAUTION: IF THE WIRE ROPE IS NOT INSTALLED FOR THE CORRECT DRUMROTATION, THE WINCH BRAKE VALVE WILL NOT HOLD THE LOAD.

CAUTION: THERE MUST ALWAY BE AT LEAST
(3) TURNS OF WIRE ROPE ON THE
WINCH DRUM WHILE UNDER LOAD.

SOME WINCHES WILL BE SUPPLIED WITH A HEX NUT IN LIEU OF A WEDGE FOR INSTALLING THE WIRE ROPE.

NOTE:

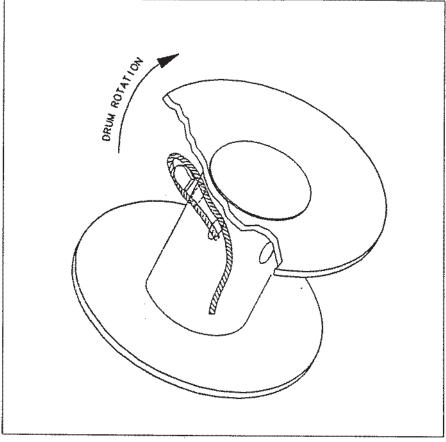


FIG 1



2-18-096	22245	SUPERCEDES 2-26-08F	ET8K AND LARGER CRANES
TITLE	C200	8-18-09G	WIRE ROPE INSTALLATION DRAWING


SECTION 300

MAINTENANCE

&

SERVICE



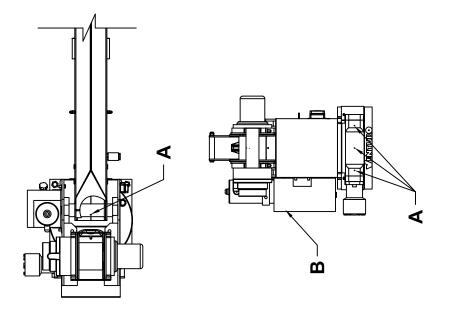


Ш

4

G

0

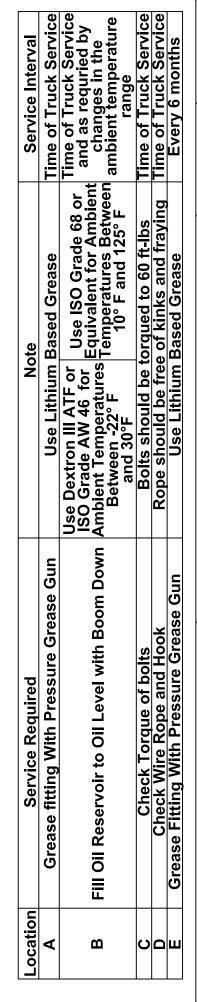



LUBRICATION & MAINTENANCE CHART

TITLE

ET25/30/36KX(X)

21878

SECTION


8-11-09 SUPERSEDES

DATE

MINIMUM VOLTAGE TEST

ET SERIES CRANES

ONE OF THE MOST COMMON ELECTRICAL PROBLEMS ENCOUNTERED ON 12 VOLT ELECTRICAL CRANES IS INSUFFICIENT VOLTAGE AT THE MOTOR WHEN DRAWING THE LARGE CURRENT THAT EXISTS AT FULL LOAD

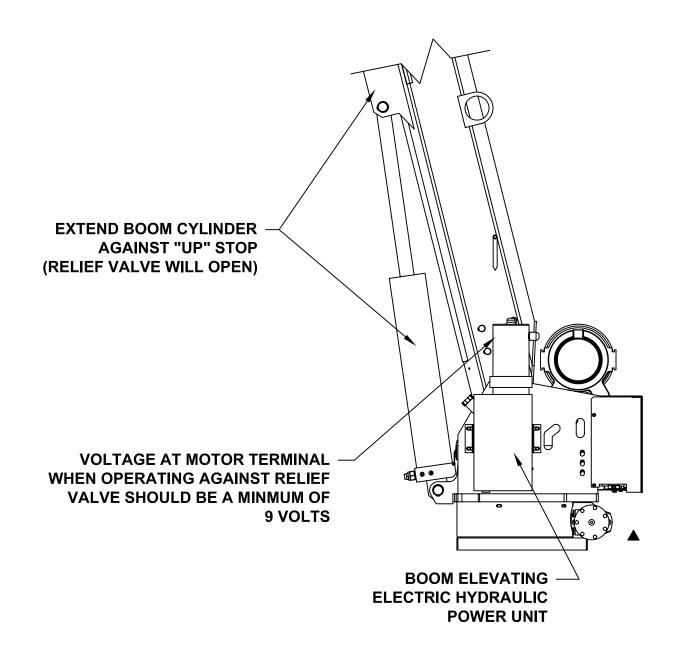


RALIRA MOLTACE TECT	140 E 00E	
ERIES CRANES	10-5-09F supersedes 2-9-09E	19963
	UM VOLTAGE TEST RIES CRANES	SUPERSEDES

SECTION 400

PARTS



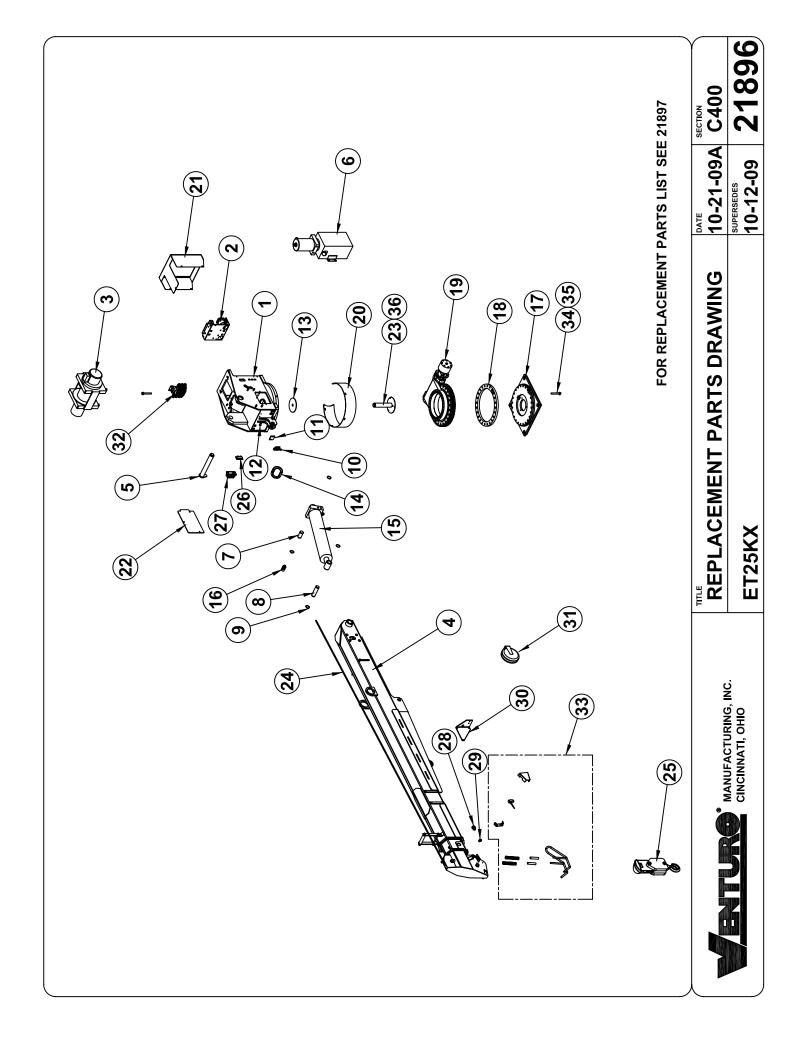


	36	1	16780-1	SWIVEL TERMINAL ASSEMBLY
	35	50	!LWSH-050	LOCK WASHER - 1/2-13
	34	50	!HHCS12MM350	HHCS 12MM X 3-1/2" LG GR 8
	33	1	27620	A-2-B MECHANICAL ASSEMBLY
	32	1	21614	VALVE BLOCK 4-3
	31	1	27310	CORD REEL ASSEMBLY
	30	1	27583	CORD REEL BRACKET
	29	1	PL-20-469	LOCKNUT
	28	1	22455	Strain relief straight
	27	1	19425	SOCKET CASE
	26	1	19428	FEMALE INSERT 10 PIN
	25	1	27667	SNATCH BLOCK - 6,000 LB
•	24	1	27668-5/16-80	Wire Rope Assembly - 5/16" x 80 ft.
	23	1	27568	SWIVEL PIGTAIL CANDLESTICK ASSEMBLY
	22	1	27000	HOUSING SIDE COVER
	21	1	27600	HOUSING REAR COVER
	20	1	27186	SLEWING RING COVER
	19	1	21418	SLEWING RING KINEMATICS
	18	1	27520s	SPACER
	17	1	27690	BASE WELDED ASSEMBLY
	16	1	17460-2400-21	OVERLOAD PRESSURE SWITCH
	15	1	21752	ELEVATION CYLINDER
	14	1	27157	ANTI-CHAFFING GASKET
	13	1	27156	SHIELD, HOUSING CENTER
	12	1	19269	CABLE CLAMP - 1/4"
	11	1	20896	BOOM SWITCH MOUNTING BLOCK
	10	1	19904	BOOM SHUTOFF SWITCH ASSEMBLY
	9	4	!SRNG-125	RETAINING RING - 1-1/4" SHAFT DIA.
	8	1	18761	PIVOT PIN - ELEVATION CYLINDER
	7	1	18762	PIVOT PIN - ELEVATION CYLINDER
	6	1	27009	HYDRAULIC POWER UNIT ASSEMBLY
	5	1	21012	PIVOT PIN - MAIN BOOM PIVOT
	4	1	21470	BOOM FINAL ASSEMBLY
	3	1	19813	ELECTRIC WINCH
İ	2	1	23154-2	ELECTRICAL COMPONENT ASSEMBLY
j	1	1	27184	HOUSING WELDED ASSEMBLY
	ITEM NO.	QUANTITY	PART NUMBER	DESCRIPTION

FOR REPLACEMENT PARTS DRAWING SEE 21896

MFG., INC.	REPLACEMENT PARTS LIST	11-16-10D	C400	
CINCINNATI, OHIO	ET25KX	8-20-10B	21897	

27198 PARTS DRAWING (POWER / MANUAL)

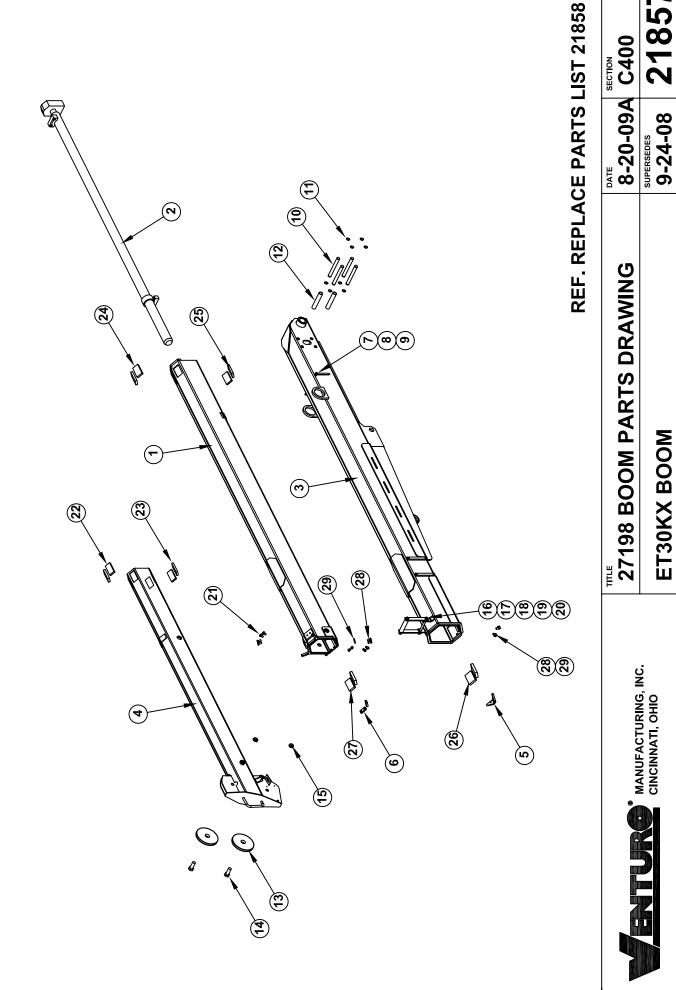

1271

MANUFACTURING, INC. CINCINNATI, OHIO

DRAWING	
RTS	
AR	
M	MC
Q	300
B 00	×E
98	NO X
271	ET3


21857

LOCK W ASHER 3/8"	HEX HEAD CAP SCREW 3/8-16 X 5/8 LG	UHM W 063X1.75	UHM W 063X2.13	UHM W 044X1.75	UHM W 050X1.75	UHM W 044X1.50	U H M W 050X1.50	IC A C S - 3/8-16 X 3/4 LG	NYLON INSERT LOCK NUT - 7/16-14	ROLLER, UHM W GUIDE	FLAT, M O U N T; W IRE RO PE G U I D E	HHCS - 7/16-14 X 5-1/2 LG	W IRE-ROPE GUIDE W ELDED	LO C K N U T 3/4-10	SHEAVE AXLE 3/4 X 2 W / 1" SHANK	SHEAVE - BOOM	EXTENSION CYLINDER ROLLER	RETAINING RING - 3/4" SHAFT DIA.	THRUST PIN - EXTENSION CYLINDER	A C O R N N U T 1/4-20 STAIN LESS	BOOM ARROW 4-7/16 LONG	SPACER, BOOM ARROW 1/2" O.D.	BEARING RETAINING BLOCK	V -BLO C K SLID ER	TERTIARY BOOM WELDED ASSEMBLY	PRIM ARY BOOM WELDED ASSEMBLY	EXTENSION CYLINDER - HOLLOW ROD	SECONDARY BOOM WELDED ASSEMBLY	D ESC RIPTIO N
ILW SH-038	IH H C S03816063	U 0 6 3 X 1 . 7 5	U 0 6 3 X 2 . 1 3	U 0 4 4 X 1 . 7 5	U 050X1.75	U 044X1.50	U 050X1.50	075	ILN U T-04414	21560	21936	IH H C S04414550	21935	ILN U T-07510	9-65011	7001	21498	ISRN G-075	21497	1A N U T-02520S	13459-2	22490	23119	23183	27110	27201	20061-1	27108	PART NUM BER
9	9	7	2	2	2	2	7	4	2	_	-	_	_	7	2	2	2	8	4	2	2	2	2	1	-	1	_	-	QIY.
29	28	2.7	26	2.5	24	23	22	21	20	19	18	17	1 6	1.5	1 4	13	12	11	10	6	8	7	9	5	4	3	2	_	ITEM NO.

REF. BOOM PARTS DRAWING - 21857



27198 BOOM PARTS LIST	8-20-09A C400	C400
ET30KX	SUPERSEDES 9-25-08	21858

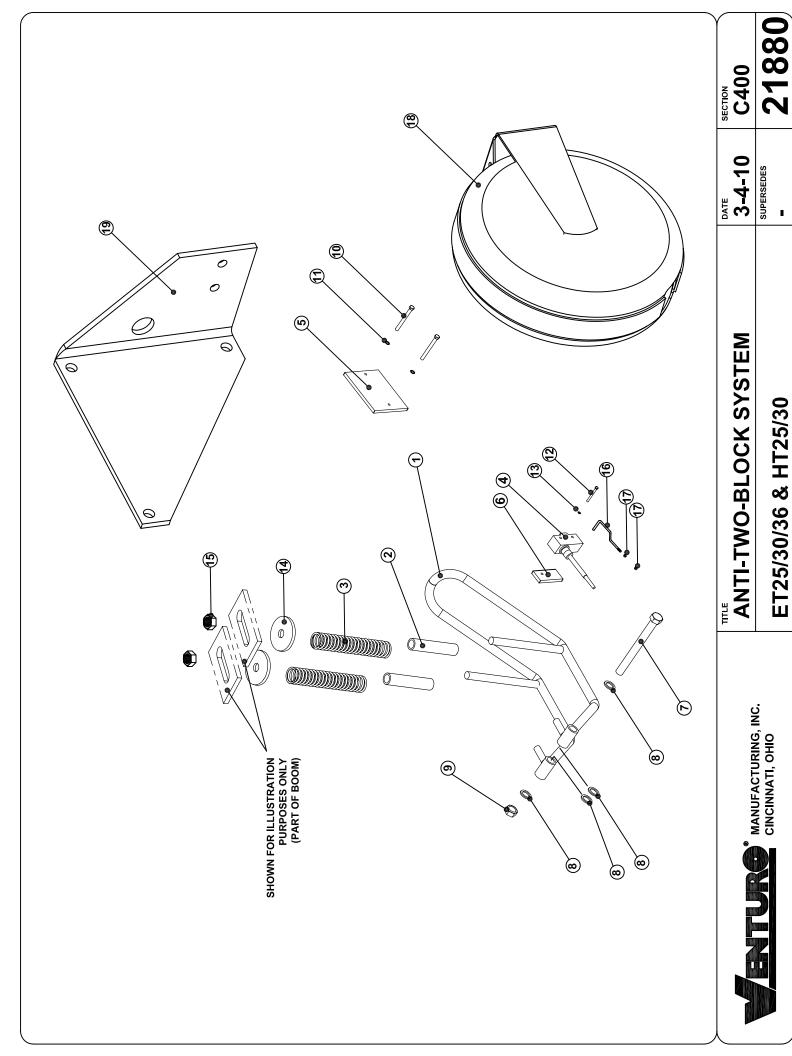


MOUNTING BRACKET - CORD REEL	CORD REEL	LOCKNUT W/ NYLON INSERT - 4-40	ROD ASSY, ADJUSTABLE A2B	t LOCKNUT W/ NYLON INSERT - 7/16-14	FLAT WASHER - 1/2" USS	STAR EXTERNAL STAR LOCK WASHER - #06	100 PAN HD CAP SCREW - #6-32 x 1	LOCK WASHER - #10	125 PAN HD CAP SCREW - #10-24 x 1-1/4	IN HEX JAM LOCKNUT - 7/16-14	AE FLAT WASHER - 7/16 SAE	.450 HEX HD CAP SCREW - 7/16-14 x 4-1/2	BASE - NEOPRENE	COVER PLATE	ANTI-TWO BLOCK SWITCH	SPRING	SPRING LOCATING TUBE	ANTI - TWO - BLOCK CAGE ASSEMBLY	TESCEIDTION OF
27583	27310	ILNUT-#0440	27624	!LNUT-04414	iFWSH-050	ILWSH-#06-STAR	iPHCS#0632100	ILWSH-#10	iPHCS#1024125	13NUT-04414N	IFWSH-044SAE	1HHCS04414450	27696	86927	19376	27586	27579b	21870	CACMIN TOAC
	_	2	_	2	2	_	1	2	2	_	4	_	_	_	_	2	2	1	EVBLODED/OTV
19	18	17	16	15	14	13	12	1	10	6	∞	7	9	2	4	က	2	1	



ште	DATE	SECTION
ANTI-TWO-BLOCK SYSTEM	3-4-10	C400
	SUPERSEDES	0.70
ET25/30/36 & HT25/30	ı	7188

23154-2 ELECTRICAL COMPONENT ASSEMBLY

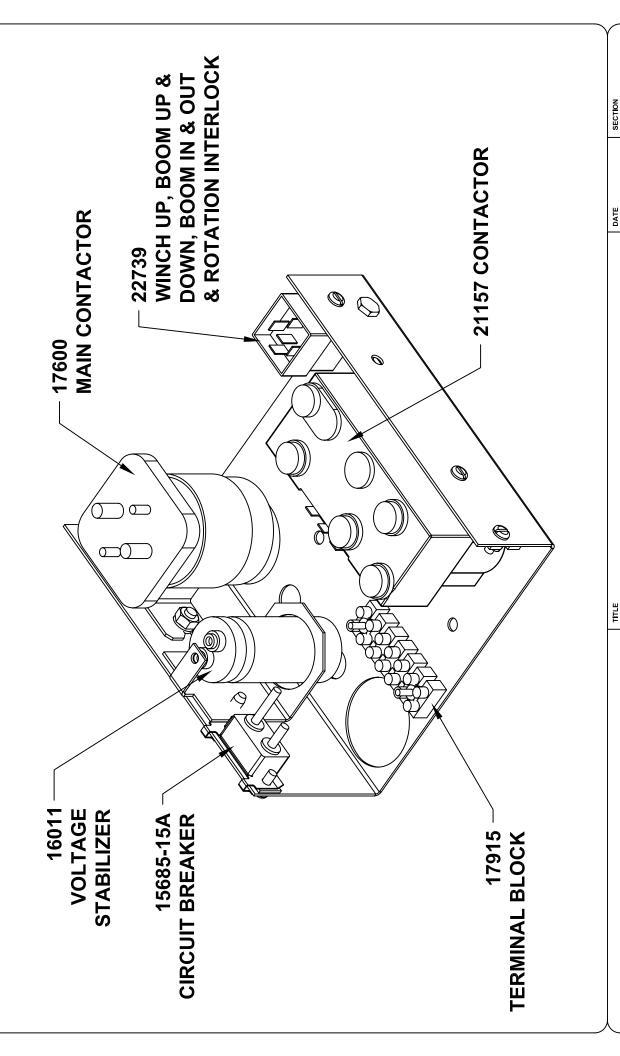


21776

10-9-09

ELECTRICAL COMPONENT ASSEMBLY

ET25/30/36KX

MANUFACTURING, INC. CINCINNATI, OHIO

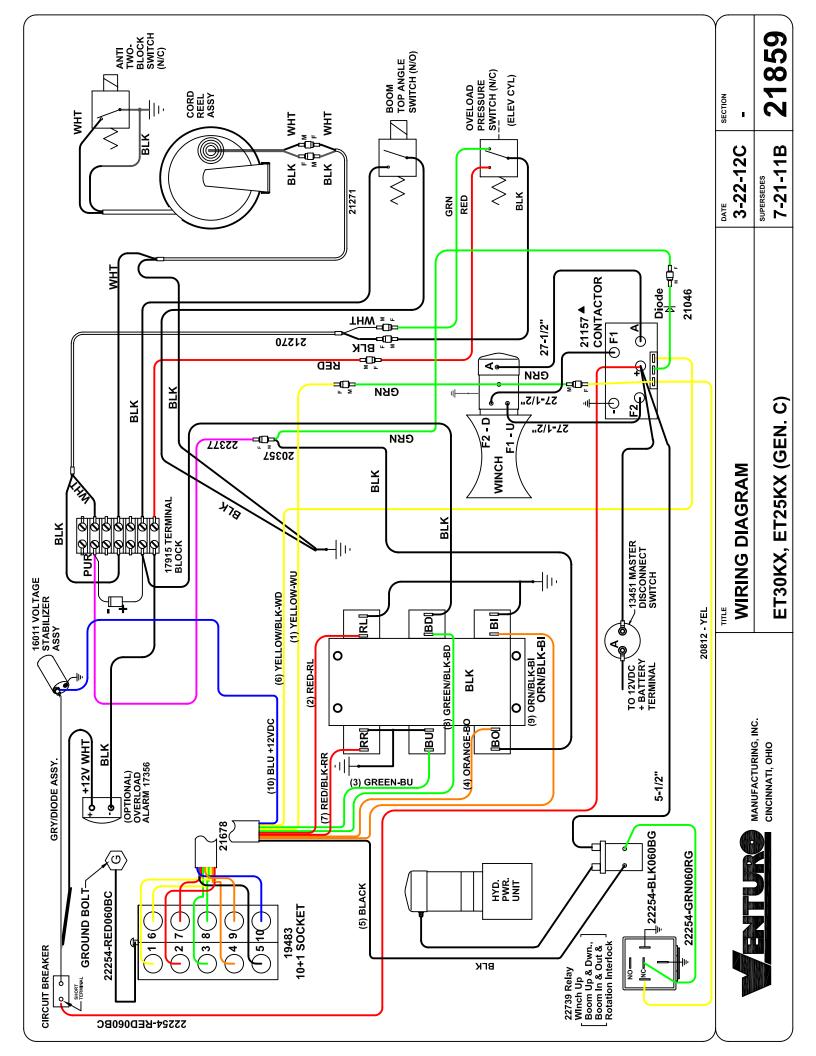

16780 AND 16780-1 SWIVEL TERMINAL ASSY.



ITEM	QTY	PART NO.	DESCRIPTION
1	1	16783	PIGTAIL & STUD ASSY
_* 2	2	14357-1	FIBER WASHER
			5/8" I.D. x 1 1/16" O.D. x 1/16" THK
* 3	1	14233	INSULATING BUSHING
4	1	14232	7/8" INVERTED FLARE NUT
5	1	!FWSH-113SAE	FLAT WASHER
			1 3/16" I.D. x 2 3/4" O.D. x 3/16" THK
_* 6	1	14357-2	FIBER WASHER
			5/8" I.D. x 1 1/4" O.D. x 1/16" THK
_* 7	2	!FWSH-063SAE	FLAT WASHER - 5/8" SAE
* 8	1	21273	BRASS JAM NUT - 5/8"-11 W/ SET SCREW
_* 9	1	5612-162-62	TEFLON WASHER
			.657" I.D. x .875" O.D. x .062" THK
_* 10	1	5714-113-62	BRASS WASHER
_* 11	1	LC-098K-00	SPRING
			.845" O.D. x .098" W x 1.00" F.L.
_* 12	1	!JNUT-06311N	NYLON LOCK-JAMNUT - 5/8"-11
_* 13	1	LOCTITE-24205	LOCTITE CAPSULE GRADE 242 BLUE
_* 14	1	19368	16780 REPLACEMENT PARTS DWG
_* 15	1	12534-5	5/8"ID x 1"OD x 14GA ZINC BUSHING



16780 SWIVEL TERMINAL ASSY REPLACES & IS INTERCHANGEABLE WITH 14231 SWIVEL TERMINAL ASSY ON ET20000 & ET20K(X) CRANES



TORQUE TO 30 FT-LBS



SECURE WITH LOCTITE 242 BLUE



16780-1 ASSY DOESN'T INCLUDE ITEM 4 OR 5




ET18/25/30/36K(X)	supersedes 4-28-08E	19368
REPLACEMENT PARTS	8-12-09F	section C400

<u>/3</u> (5)

(15)

(1)

ET25/30KX IN-COMPARTMENT CONTROLS

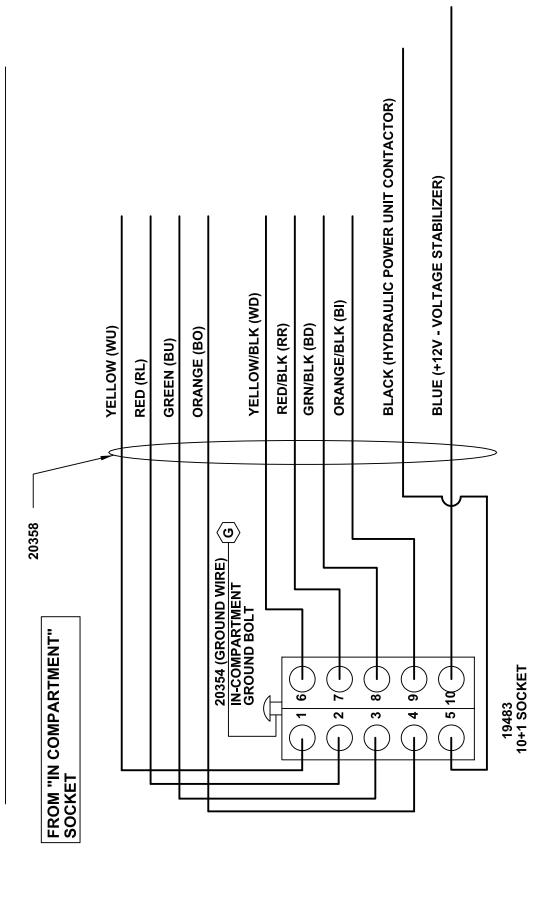

NOTE: BLUE/BLK WIRE OF 20358 HARNESS NOT USED




<u> </u>	DAIE	
IN-COMPARTMENT CONTROLS	1-19-05A	
	SUPERSEDES	_
ET25/30KX CRANE	4-12-02	

20359

SECTION

22060 PENDANT (4 - SWITCH)


CORD REPLACEMENT INSTRUCTIONS

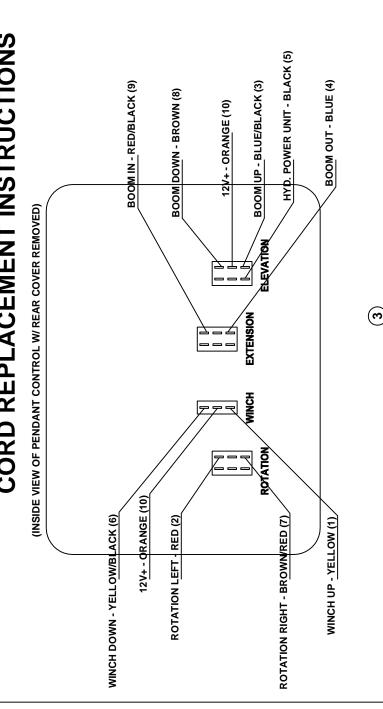

INSTALLED 'AFTER' ROUTING REPLACEMENT CORD ASSY THROUGH PENDANT HEAD WIRE TERMINALS TO BE AND PLUG HOUSING.


TOGGLE SWITCH JUMPER WIRES NOT SHOWN FOR CLARITY.

STOW OR CUT-BACK UNUSED WIRES.

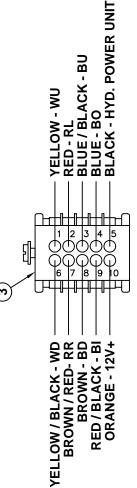

PLUG - BACKSIDE VIEW


(N

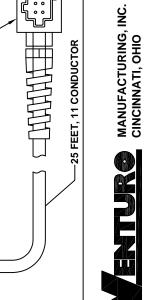


MING	
DRA	
ARTS	
IENT P	
ACEN	
EPL	

SUPERSEDES	9-6-11
	PENDANT (STANDARD CTRL)
	22060

4	4	3	22152	DPDT MOMENTARY TOGGLE SWITCH	SE SWITCH
	3	1	19427	MALE INSERT - 10 + 1 POLE	E.
	2	1	19426	PLUG CASE - 10 + 1 POLE	
	1	4	22081	SPDT MOMENTARY TOGGLE SWITCH	LE SWITCH
	ITEM	ITEM QTY	PART NO.	DESCRIPTION	
				DATE SECTION	Z
ラ	PAR	ST	IT PARTS DRAWING	9-28-12B C400	00

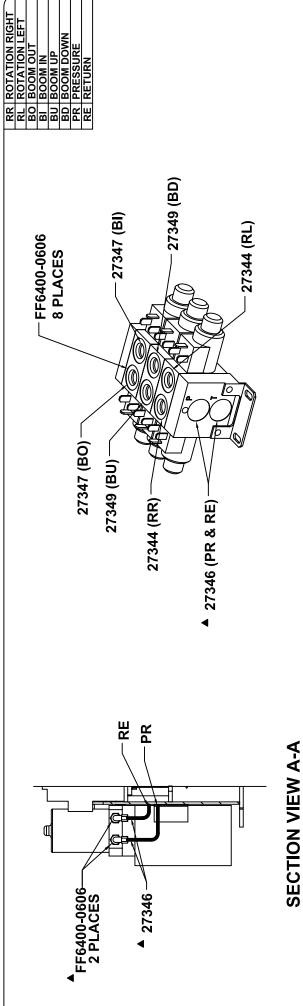

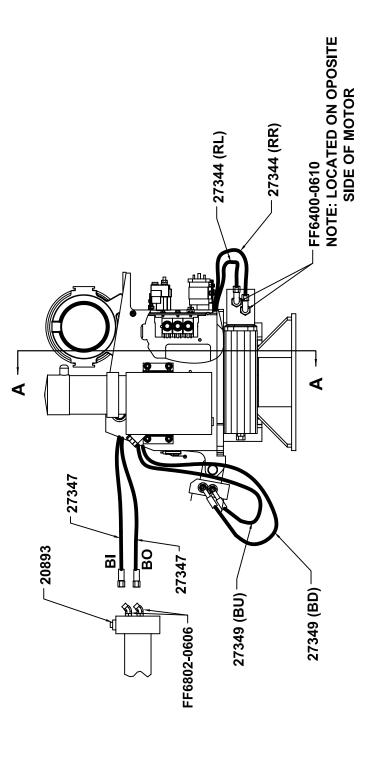




REPLACEMENT PARTS DRAWING

ET25/30/36KX HYD. COMPONENTS


SECTION C400 8-17-09A ылте 6-8-10В SUPERSEDES

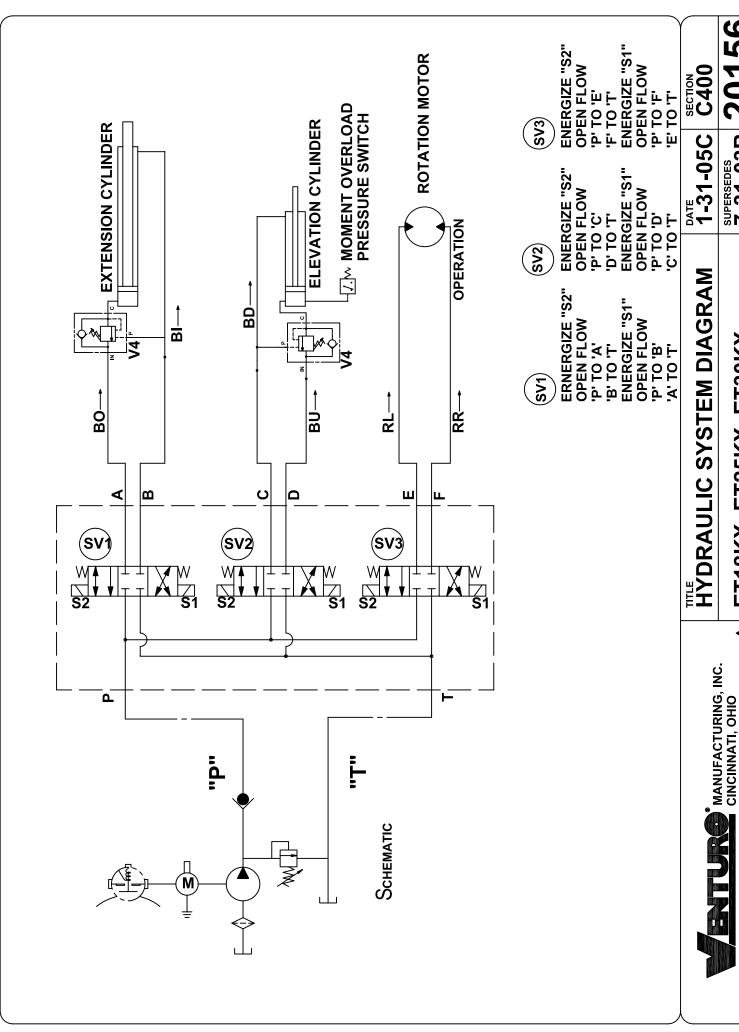

ET18KX, ET25KX, ET30KX

SUPERSEDES 7-31-03B

20061-1 EXTENSION CYLINDER

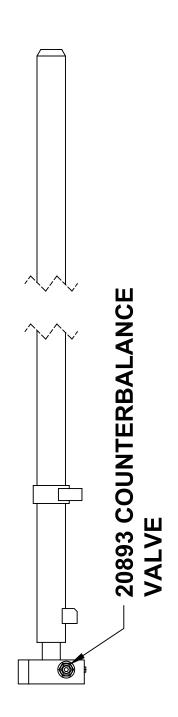

SEAL KIT P/N: 19887




TITLE EXTENSION CYLINDER	_{рате} 8-20-09
	SUPERSEDES
EI/HIZ5/30KX	•

21879

SECTION C400

21752 ELEVATION CYLINDER

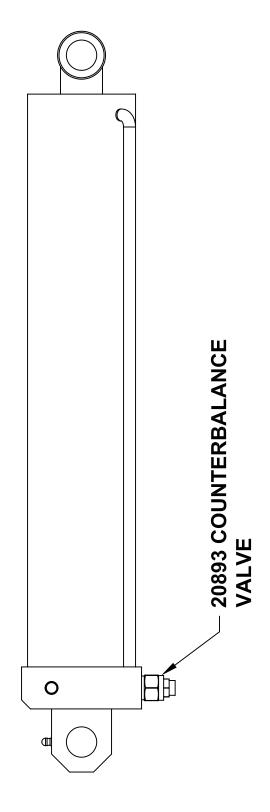


SEAL KIT P/N: 21774



MANUFACTURING, INC. CINCINNATI, OHIO

ELEVATION CYLINDER	_{рате} 8-12-09	SECTION C400
ET/HT25/30/36KX(X)	SUPERSEDES -	21773

19813 WINCH

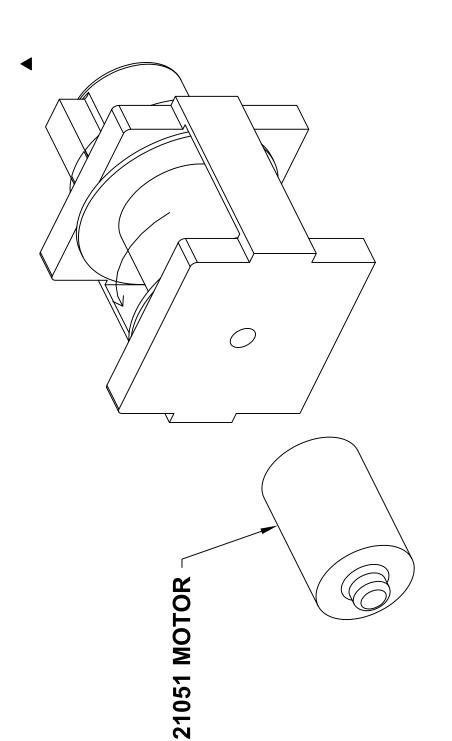




MINCH REPLACEMENT PARTS	ET25/36K(X)
WINC	ET25

21053 6-30-05A supersedes 10-27-04

SECTION

21418 SLEWING SYSTEM REPLACEMENT PARTS

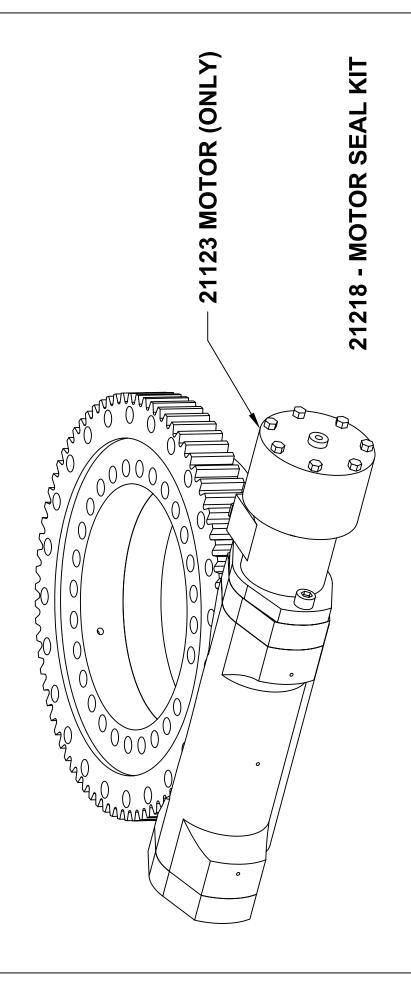

21886

SECTION

DATE 08-24-09

SLEWING REPLACEMENT PARTS

ET25/30KX

MANUFACTURING, INC. CINCINNATI, OHIO

SUPERSEDES

21898 DECAL KIT

ġ	QTY.	PART NO. OTY. DESCRIPTION
14473-2	7	DECAL, GREASE
17389	2	DECAL, VENTURO - MEDIUM
15401	_	DECAL, UNLAWFUL TO OPERATE
23132-1	_	DECAL, BOOM CAPACITY ET25KX RIGHT
23132-2	_	DECAL, BOOM CAPACITY ET25KX LEFT
19743	2	DECAL, MODEL NAME DECAL ET25KX
15392	_	DECAL, DANGER ELECTROCUTION HAZARD
15391	1	DECAL, CRANE NOT PASSENGER LIFT
15390	_	DECAL, CAUTION, INSTRUCTIONS
15513	_	ON / OFF PLATE DECAL
13397	_	DECAL, OIL LEVEL
21852	_	INST. DWG DECAL PLACEMENT
20051	1	DECAL, ROTATION STOP LOCATION
20174	_	DECAL, GROUND CABLE ATTACH TO TRUCK FRAME



FIELD SERVICE LABEL KIT	_{рате} 10-12-09	SECTION C400
ET25KX	SUPERSEDES	2189



LIMITED WARRANTY POLICY

This limited policy warrants new products of Venturo be free from defects in material and workmanship for a period of one (1) year from date of original installation. This warranty covers:

- ♦ Repair or replacement of product
- ♦ Labor to repair or replace product
- ♦ Freight to return and/or replace product

We shall not be liable for any contingent liabilities arising out of the improper function of any products. Warranty shall become void if the product is improperly installed, modified, damaged, abused or used for application other than intended use.

WARRANTY CLAIMS

Venturo Manufacturing, Inc. will make a good faith effort for prompt correction or other adjustment with respect to any product, which proves to be defective after our inspection and within the warranty period. Before any repairs are attempted or before returning any product, your Venturo Distributor is required to obtain a warranty claim number. This number is necessary for any claim to be considered. To obtain a warranty claim number, Venturo requires the model and serial number. Only authorized Venturo Distributors can perform warranty. For the name and address of your local Venturo Distributor call the **Warranty Claim Department – 513-772-8448.**

WARNING – It is the responsibility of the installer to insure the installation is completed according to the manufacturer's recommendations, insure the ultimate user understands how to operate product in a safe manner and understands the need for regular service and maintenance by an authorized Venturo Distributor. No modifications or alterations may be made to any Venturo products without the expressed written consent of the manufacturer. Reinstallation of any Venturo product must be done by an authorized Venturo Distributor, to the standards of the industry including maintenance, service and affixing of all instruction, safety and warning decals. Users should again be instructed as to the safe operation at time of delivery. Maintenance, service, operation and safety warning decals are available on request from Venturo Manufacturing, Inc.

VENTURO MANUFACTURING, INC

DIVISION OF COLLINS ASSOCIATES, INC
12110 BEST PLACE • CINCINNATI, OHIO 45241
513.772.8448
www.venturo.com